

INSTRUCTION MANUAL


electronic kitchen scale







■ PRODUCT OUTLINE

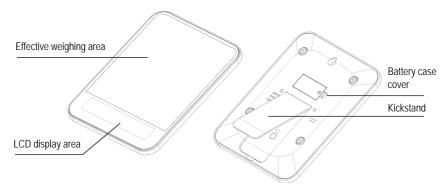


- * Picture for reference only, product and function setting please prevail in actual item.
- * Please always put weighing object within effective weighing area.

■ FEATURES AND SPECIFICATIONS


- 1. Max capacity: 10kg
- 2. With high precision strain gauge sensor
- 3. Calendar / Time / Alarm timer / Temperature / Humidity function
- 4. Hang on the wall or on the desk
- 5. Indicate volume of water and milk
- 6. Two unit systems: g(kg), lb:oz convertible
- 7. With Zero/Tare function
- 8. Low battery power / Overload indication

■ LCD DISPLAY

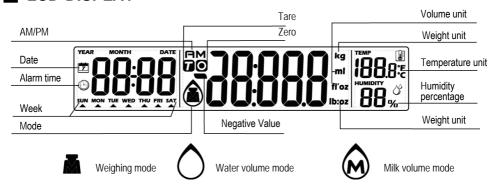



■ KEY ILLUSTRATION

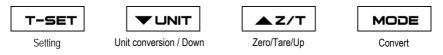


■ HOW TO INSTALL OR REPLACE BATTERIES



- 2 x 1.5V (AA/AAA) batteries (excluded). Remove package foil before use;
 - A. Take out used batteries, with the aid of a sharp object if needed.
 - B. Install new batteries by putting one side of the battery down first and pressing down the other side. (Please observe the polarity)

■ DATE AND TIME SETTING

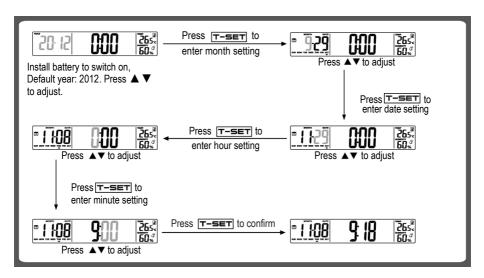

- Install battery to switch on and enter year setting automatically. Press ▲ ▼to adjust and ▼-=== for confirmation in turn.
- 2. Under time setting mode, press T-SET for 3 seconds to enter setting: Set Year/ Date/Time in turn. Press ▲ ▼ to adjust and SET for confirmation. (Continuous pressing ▲ ▼ will speed up the advance of value or the decrease of value.)



- 3. Press T-SET to confirm time and Second starts from "0".
- In setting process, return to real time display automatically after idling for 60 seconds.

Remark: The time mode (12/24 hour) depends on sales destination or the requirement of distributor.


START WEIGHING

1. Weighing mode


- A. Place the scale on a solid and flat surface.
- B. Under real time display mode, press MODE to convert to weighing mode and wait until LCD shows "0".
- C. If LCD shows weighing mode, please enter to Step D directly.

 If LCD shows volume mode, please press

 LDT to convert to weighing mode, and then enter Step D.
- D. Load weighing object on scale (or bowl) to start weighing, LCD will show the weighing reading.
- E. Place bowl (if used) on the scale and tare the reading before weighing. (Tare function described additionally)

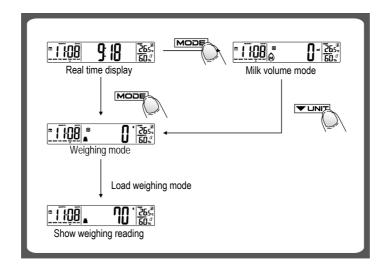



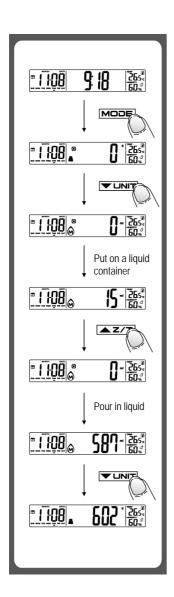

2. Volume indication mode

- A. Place the scale on a solid and flat surface
- B. Under real time display mode, press MODE to convert to weighing mode and wait until LCD shows "0".
- C. Press **VUNIT** to convert to Water or Milk mode (Refers to mode setting specifically)
- Put a liquid container onto the scale platform, LCD shows the weight of container
- E. Press **AZ/T** to reset "0" and tare.
- F. Pour liquid (water or milk into the container, LCD shows the volume of the liquid.
- G. Press **VUNIT** to convert to weighing mode, and check the weight of liquid.



■ UNIT AND MODE SETTING


If the scale is with both measuring systems of Metric (g,kg) and Imperial (oz, lb), you can press "unit" convert between two systems during the course of weighing:

1. Press and hold **TUNIT** to convert weight unit between Metric and Imperial systems.




2. Under weighing mode, press **VUNIT** shortly to convert between weighing mode and volume mode (water or milk).

Metric system:

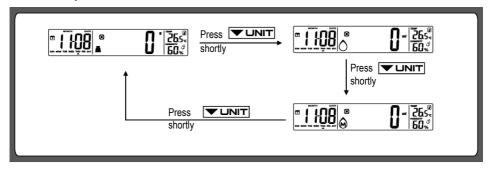

Imperial system:

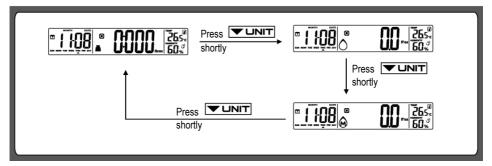

Remark: The unit system of scale depends on sales destination or the requirement of distributor.




■ "ZERO" OR "TARE" FUNCTION

To weigh different loads consecutively without removing loads from the scale. Put first load on the scale get weight reading. Press button to reset the LCD reading to "0" before adding next load. You can repeat this operation.



Condition 1: "ZERO" function When total sum of all loads on scale ≤ 4%


LCD will show "----" or "0g" each time AZ/T is pressed. "----" means not stable, please wait for a moment. "0g" and meanwhile an icon " on upper left corner of LCD mean "ZERO" function is active. Max. weight capacity remains unchanged.

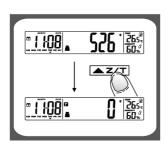

Condition 2: "TARE" function When total sum of all loads on scale > 4%


LCD will show "-----" or "0g" each time Z/T is pressed. "-----" means not stable, please wait for a moment. "0g" and meanwhile an icon " " on upper left corner of LCD mean "TARE" function is active. Max. Weight capacity reduced by total weight of all loads.

■ CONVERSION BETWEEN WEIGHING MODE AND REAL TIME DISPLAY MODE

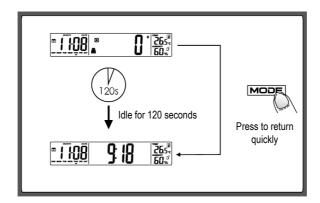



■ ALARM TIMER SETTING

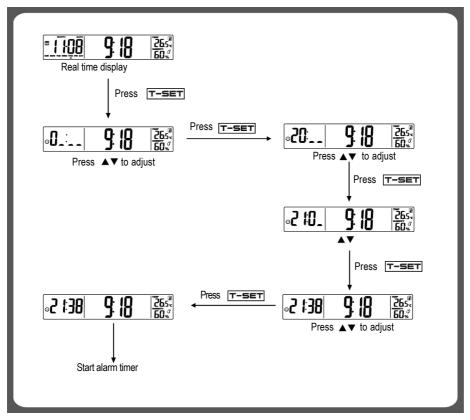


- When setting time span, touch T-SET to confirm and prompt to next digit.
 After setting time span, touch T-SET to start counting down. During counting down, touch MODE to clear the set time span.
- 2. The time counts down to "00:00", alarm will start "beeping" for 60 times and the scale will automatically return to real time display mode.
- 3. Touch any key to stop "beeping".
- 4. Max time span of the alarm timer: 99:55.

■ TEMPERATURE AND HUMIDITY

Temperature range: 0~50 °C, Division: 1 °C Humidity range: 30~95%, Division: 5%




■ WARNING INDICATORS

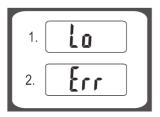

- 1. Replace new battery.
- Scale overload. Remove item to avoid damage. Max. weight capacity is indicated on the scale.

■ HAND ON THE WALL OR ON THE DESK

- Scale can be put on the desk as a clock or decoration if lay the kickstand on the back of scale.
- Scale can be hanged up on the wall by the hole. (Hook on wall not included)

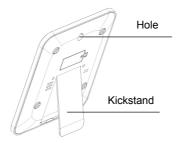

* Picture for reference only, please prevail in actual item.

CLEANING AND CARE

- Clean the scale with a slightly damp cloth. DO NOT immerse the scale in water or use chemical/abrasive cleaning agents.
- All plastic parts should be cleaned immediately after contact with fats, spices, vinegar and strongly flavoured/coloured foods. Avoid contact with acids citrus juices.
- 3. Always use the scale on a hard, flat surface. DO NOT use on carpet.
- 4. DO NOT strike, shake or drop the scale.
- 5. The scale is high precision device. Please take care of it.
- 6. Please keep it dry.
- 7. Please check whether battery is installed or in high level if scale cannot be turned on.
- 8. The scale is for family use only, not for commercial purpose.

